

# For help visit incyt by LX incyt.io/support

Copyright 2021 LX Corporation Pty Ltd. All rights reserved.

Apple and the Apple Logo are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc., registered in the U.S. and other countries.

Google Play and the Google Play logo are trademarks of Google Inc.



**Blue Node**Quick Start Guide



## **Getting Started**

Download the Incyt by LX app from the App Store on your phone. Create a new account, or log in with an existing account.





#### **Product Overview**



### **Device setup**

This Blue Node requires a Sensor and LX Base Station/Gateway to function, which are available for purchase from Incyt.io.

- Remove contents of box and check the component list above to ensure the kit is complete.
- Screw the Antenna clockwise onto the Antenna Connector by hand. Do not over-tighten.

# **Installation and Mounting**

Select a suitable location to install the Blue Node and coupled sensor. Where possible, select an installation site that minimises vegetation and obstructions between the Blue Node and the Base Station/Gateway. Avoid installing the Blue Node in such a way that a platform is created for birds to stand on and access the antenna. Alternatively, bird spikes can be installed.

LX recommends using an LX Range Tester to select an installation location with suitable Base Station signal strength.

- Install the Blue Node as per Figure 1.1, ensuring it is mounted as high as practically possible with the antenna protruding above the top of the pole/fixture to improve transmission.
- Install the compatible Blue Node sensor according to its Quick Start Guide. When instructed, align the white arrow on the sensor cable with the white arrow on the Figure 1.1 sensor connector. Push firmly until you hear an audible click.

IMPORTANT! Do not twist the connector. This will damage the Blue Node.





**Bird Spikes** 

 
As high as

practically

possible

Once the Blue Node is plugged in, it will connect to the Incyt platform for activation and configuration. This process may take several minutes. Once complete, data will appear on the dashboard in the App.

If data does not appear within 5 minutes, use the LX Range Tester to check network connectivity.





Protect cables from animals by installing sheathing from your local hardware store