



Temperature Sensor

Quick Start Guide

INCYT

Product Overview



- 1 Temperature sensor
- 2 Connector
- 3 1/2" BSP nut
- 4 1/2" BSP silicon gasket

Start Here

- 1 Open the INCYT App and register the sensor. When instructed, scan the QR code on the box.
- 2 Add the appropriate Application within the INCYT App, and link the sensor.



INCYT

Preparation

- 3 This temperature sensor requires a Blue Node to function, available for purchase from incyt.com.au. Follow the instructions provided with the Blue Node to complete setup and activation.

Installation and Mounting

- 4 Choose a location near the liquid to be monitored. Install the Blue Node according to its 'Quick Start Guide'.

Figure 1.1


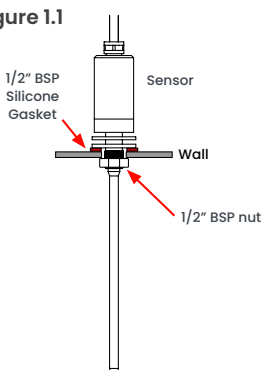


Figure 1.2

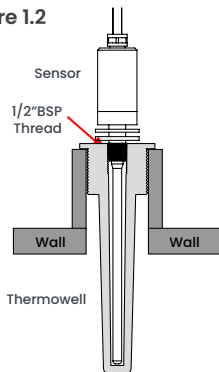

Standard installation

- 5 Drill a 21mm diameter hole in a flat panel. Install the supplied 1/2" BSP silicone gasket over the thread of the sensor, and insert the sensor into the hole, as pictured in *Figure 1.1*. Tighten the supplied 1/2" BSP nut onto the thread to secure the sensor in place.

Thermowell installation

- 6 Install a thermowell with a 1/2" BSP thread and insert the sensor, as pictured in *Figure 1.1*.
- 7 Plug the connector on the temperature sensor into the Blue Node, according to the Blue Node 'Quick Start Guide'.
- 8 If possible, ensure that data is reporting correctly before leaving the site.

INCYT

For help visit INCYT
incyt.com.au