Product Overview

1 Satellite Antenna
2 LED
3 Device ID
4 Rubber Pads
5 ⌀5mm diameter mounting holes
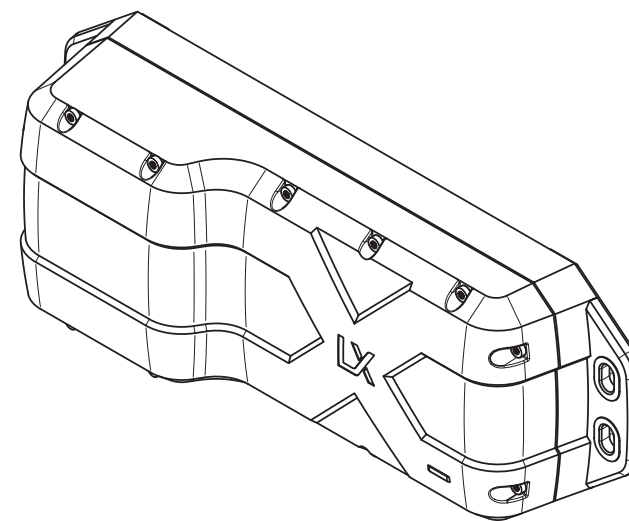
Safety and compliance

This device operates on licensed RF spectrum. Check that it is approved for operation in your country before operating it. Ensure installation complies with all relevant local regulations and requirements.

Troubleshooting

Further installation, activation and troubleshooting information is available at **incyt.io/support**

For help visit incyt by LX
incyt.io/support
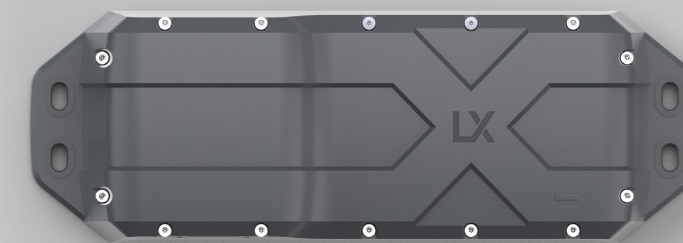
Andromeda
Quick Start Guide

Getting Started

1 Download the Incyt by LX app on the iOS AppStore, or Google Play store on your mobile device.

Download on the App Store


GET IT ON Google Play

2 Create a new account or login with your existing account.

3 Follow instructions in the app to pair your device.

4 Follow the instructions on the next page to activate and mount your device.

Device Activation

5 The device is delivered in a dormant state. Activate before use by following the steps below.

Ensure the device is placed:
· outside
· with an unobstructed view of the sky, and
· within cellular network coverage

Clear view of sky
Within network coverage
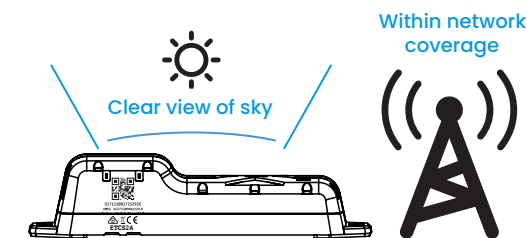
6 Use the magnet included in the box to swipe over the LED on the device. The LED may start blinking white. Swipe a second time within 5 seconds. The LED will remain on for 5 seconds.

Note: If the LED turns ON for 3 seconds in a different colour, the device has already been activated.

7 The device will then attempt to connect to the Incyt platform for activation and configuration. This process, indicated by the LED blinking, may take several minutes. Once the device has successfully activated, the LED will remain white for 10 seconds and then turn off.

8 Refer to the **Incyt app dashboard** to ensure the device is connected.

Device Installation and Mounting

9 Select an appropropriate location to mount your device. The most important factors to consider are:
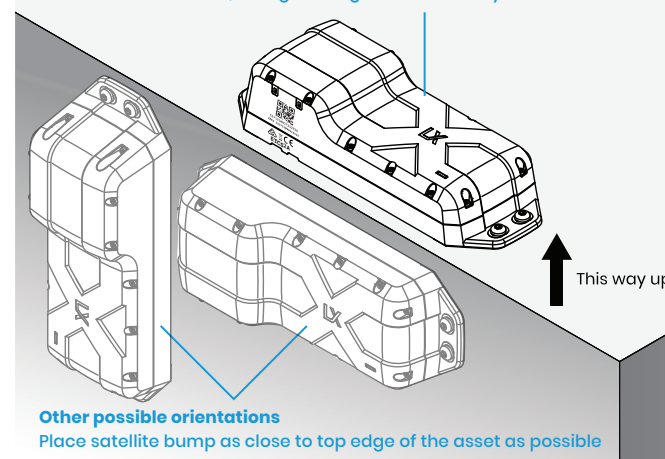
- **Exposure to environment**

  Although this device is rugged, protecting it from extreme temperatures, chemicals and dirt will extend its operational life.

- **Orientation**

  See the following diagram for the supported device orientations. Installing the device in a different orientation may dramatically reduce its life and performance.

Strongly recommended orientation
On horizontal surface, LX Logo facing towards the sky
This way up
Other possible orientations
Place satellite bump as close to top edge of the asset as possible

- **Temperature**

  The recommended temperature range of this device is 5ºC to 50ºC. Use outside of this range may limit the device performance and functionality, and may reduce the battery and operational life of the device.

- **Wireless network**

  This device uses multiple technologies for geo-location and communication with the Incyt platform. Installing the device in a location with unobstructed visibility to the sky/GPS satellites, and strong cellular connectivity, will ensure maximum performance and accuracy of the device.

10 Clean the mounting surface prior to installation by removing debris. The surface needs to be flat to avoid any stress on the enclosure after mounting. To mount the device, use 4 screws, bolts or rivets with thread diameter smaller than Ø 5mm and head diameter between Ø 8mm and Ø 12mm.

Note: Be careful not to tighten the screws too hard to avoid damaging the device.

209.4 mm
21 mm